


# START OF OPERATION


## INSTRUCTION HOW TO START THE MACHINE

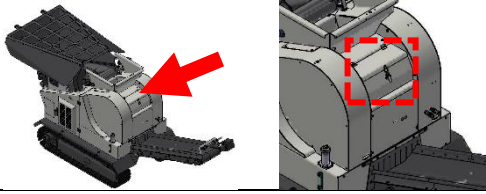


The remote control has been placed inside the toolbox: take it without disconnecting the cable connected to the receiver.




1. Turn-on the main battery switch (inside the lateral door).

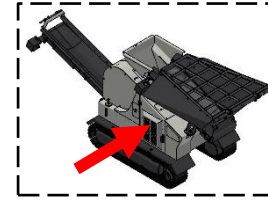


2. Pull-out all red emergency switches on the machine (the pull-out direction of rotation is indicated on the button itself).

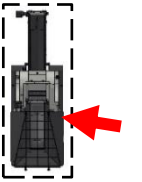


3. Turn the starter key in 1st position (one-step) to activate control display.

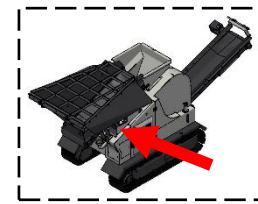

4. Rotating again the starter key to the right, the glow plug warning light  will be on. Holding untill this light will be off, then rotate again the starter key to the right in order to start the engine.



5. Increase rpm up to 1500/1600 rpm by moving up the lever, in the direction of the 'RABBIT' image.

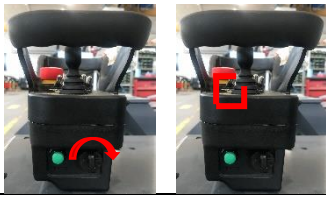

NOTE: remote control has already connected to the machine receiver by means of its cable.

6. Check if the remote control switch has already been turned to the right (if not, turn the remote control switch to the right), then press the green button twice in order to activated the remote control.

7. It is possible to move the machine by means of remote control, in order to move the machine


- the **left lever** permit to move forward/backwards ('UP' and 'DOWN') the left machine track on the spot;
- the **right lever** permit to move forward/backwards ('UP' and 'DOWN') the right machine track on the spot;
- Press **both lever** 'UP' arrows to permit to the machine to go forward straight;
- Press **both lever** 'DOWN' to permit to the machine to go backward straight;
- Press the EMERGENCY PUSHBUTTON (the **red button**) in order to stop the engine, then even the tracks movements.



## How to turn off the machine



8. Decrease the 'rpm' to the minimum by moving down the lever, in correspondence of the 'TORTOISE' image.

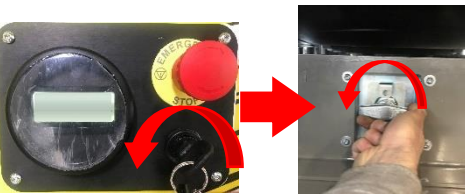

9. Rotate the key to the left and press one of the emergency buttons located near the display, then turn-off the main battery switch. Replace the remote control inside the toolbox paying attention to don't damage the components and without disconnecting the cable connected to the receiver.

## TROUBLE SHOOTING

### No power on control panel

- a. Check the main battery switch and turn it on;
- b. Low battery power, charge battery.

### No power on control panel when starter key is in ignition position

- a. Emergency switch on machine or on remote/wire control is activated (turn and pull out the red button).